



# Instructions and maintenance

## Mounting

Place the scoreboard in a safe position, both for the scoreboard and for its direct environment. The ScoreTrack tripod has a quick mounting and release system, make sure all is properly fixed. Do not adjust the height of the tripod to high, take the various risks in account. For mounting on a fence you can use the ScoreTrack hanging hooks and or use the handles on the back of the scoreboard. Always make sure it is properly fixed and it doesn't create any danger.

## Configuration

Each ScoreTrack must be configured at least once in order to recognize the remote control. After switching on a ScoreTrack, the LED's will flash **7EAnn PLAY** for 10 seconds in which you are able to start the configuration process. When the ScoreTrack receives no 'configuration signal' from the remote control within these 10 seconds it will automatically be ready to use as configured the last time.

## Set-up

The remote (control) has 4 buttons **Home (H)**, **Guest (G)**, **Correction (C)** and **Time (T)** and a LED that can become green or red. Execute all steps after witch one or many ScoreTracks are connected and (re)configured.

- Switch on the power (on the right of the bottom of the unit) of one ScoreTrack OR of multiple units at the same time. ScoreTrack(s) will flash: **7EAnn PLAY** for 10 sec.
- Press **H** and **G** simultaneously (exactly at the same time!) on the remote. The LED on the remote will first be green, hold both buttons until the LED changes in to red.  
The display will beep an show: **PrESS C**
- Press **C**  
Display: **Co-nr 01**

**Court number** (in case you use multiple ScoreTracks on different courts<sup>1</sup>)

- Press **G** to increase the court number or **H** to decrease  
Display: **Co-nr 01** to **20**.
- When OK press **C**

### Sound

- Display: **BEEP On**
- Press **H** to change the settings  
display: **On** (max. sound) or **50** (reduced) or **OFF** (silent)
- When OK press **C**

### Intensity of LED's

- Display: **LED OFF**
- Press **H** to change the status
- Display: **OFF** (max. intensity!) or **On** (dimmed)
- When OK press **C**

<sup>1</sup> Remark: This is only to prevent missing a signal. Each remote / ScoreTrack combination uses a unique coding!

### Lap time

- Display: **LAPCon 5:00**
- Press **G** to increase the period or **H** to decrease the period.  
Display: **LAPCon 5:00** (minimum of 5 minutes) to **LAPCon 300:00** (maximum of 300 minutes )
- When OK press **C**

## Start game

The display will show **0 0** and the number of minutes, for instance **5:00**.

### Allocating points

Press **H** or **G** on the remote for to allocate a point. Press the correction button **C** to correct the last allocated points (max. twice). PS. It is always possible to change the score, even before the timer has started, during pauses or after the timer has finished or during the extra time.

### Start the timer

By pressing **T** the timer will be started. Press **T** again to pause, the remaining time will flash. Press **T** again to resume. When the timer has finished you can start it again by pressing **T**, it will start at **0:00** and increment continuously.

### Reset the score AND number of minutes

By continuous pressing **C** for 4 seconds the red light LED will become green and ScoreTrack will be fully reset for a complete new match **0 0** including a reset of the number of minutes.

## Very important notes, read once!

1. The remote control in THIS package operates in the 868 MHz bandwidth which is licence-free in many European countries. Note: other version available that operates in the 915 MHz bandwidth (USA).
2. A minimum of 5 seconds between granting points has been programmed. This prevents accidentally double clicking.
3. When the light of a remote remains on (red), the remote has (coincidentally) been put into configuration mode, generating a new unique wireless connection key to the scoreboard.  
The only way out is to finish this procedure. Press multiple times the **H** and **C** buttons until the (red) light is off. Be aware that the unique wireless connection key of the remote has just changed so you NEED to perform the set-up of the scoreboard ONCE AGAIN in order to re-establish the wireless connection.
4. The scoreboard has a feature that even when temporary switched off it still keeps the score.  
When you switch on the scoreboard and you want to change the configuration and go through the set-up you first NEED to reset to **0 0** by continuous pressing **C** for 4 seconds. If you then switch the scoreboard off and on the the LED's will flash **ScorE boArD** for 10 seconds in which you are able to start the configuration process.
5. Only use the appropriate whiteboard markers on the whiteboard. Clean the whiteboard with the appropriate whiteboard cleaner.
6. Replace the batteries of the remote when a reduction in operating range is noticed.

## Batteries

Battery of referee remote: two times a 1,5V AA battery

Battery of the scoreboard: 12V (FM 1270), width 150 mm, height 95 mm, dept 60 mm

## Guarantee

Six months, full parts and labour.