



ScoreTrack Tennis Instructions

Mounting

Place the scoreboard in a safe position, both for the scoreboard and for its direct environment. Make sure the ScoreTrack is properly fixed with the quick release system to tripod. Do not adjust the height of the tripod too high, take the various risks in account. For mounting on a fence you can use the ScoreTrack hanging hooks and or use the handles on the back of the scoreboard. Always make sure it is properly fixed and it doesn't create any danger.

Connection (& set-up)

Each ScoreTrack must be 'connected' once in order to respond to the remote control (referee unit OR watch). After switching on a ScoreTrack, the LED's will flash **Score boArd** for 10 seconds in which you are able to start the connection (& set-up) process. When the ScoreTrack receives no 'set-up signal' from the remote control within these 10 seconds it will automatically be ready to use as configured the last time.

Each remote, both referee and wrist watch, has 3 buttons **I**, **II** and **C** and a LED that can burn green or red. **Execute ALL 19 steps** after which one or many ScoreTracks are connected and (re)configured.

Connecting

1. Switch on the power (on the right of the bottom of the unit) of one ScoreTrack OR of multiple units at the same time. ScoreTrack(s) will flash: **Score boArd** for 10 sec.
2. Press **I** and **II** simultaneously (exactly at the same time!) on the remote.
The LED on the remote will first be **green** and hold both buttons until the LED changes in to **red**.
The ScoreTrack(s) will beep and show **PrESS |**
3. Press **I**, display will show: **PrESS C**
4. Press **C**

Court number¹ Co-nr 0| (in case you use multiple ScoreTracks on different courts)

5. Press **II** to increase the court number or **I** to decrease, **Co-nr 0|** to **20**.
6. When OK press **C**

Sound BEEP On

7. Press **I** to change. **On** max. sound or **50** reduced or **OFF** silent
8. When OK press **C**

Intensity of LED's LEd OFF

9. Press **I** to change
10. Dimmed **OFF** (=max. intensity) or dimmed **On**
11. When OK press **C**

Short Set (4 instead of 6 games) SHOr7 OFF

12. Press **I** to change. **OFF**(normal 6 games set) or **On** (4 games, Tie-break at 4-4)
13. When OK press **C**

Pro Set² ProSE OFF

14. Press **I** to change. **OFF**(normal 3 set match) or **On**
15. When OK press **C**

Super Tie-break³ (Match Tie-break) SUBrE OFF

- Press **I** to change
OFF normal 3rd set or
7POn No 3rd set but Super Tie-break of 7 points
10POn No 3rd set but Super Tie-break of 10 points
12POn No 3rd set but Super Tie-break of 12 points
- When OK press **C**

No Ad(vantage)⁴ n0-Ad OFF

- Press **I** to change
OFF normal advantage or
On No advantage (first point after 40-40 wins game)
- When OK press **C**

The set up is completed. . 00 00

Start game

Change the service indicator .

Press **C** to chance. Note: this is only possible at the start of a game . 00 00

Allocating points

Press **I** or **II** on the remote for to allocate a point. Standard tennis scoring rules including advantage **A** and Tie-breaks will apply. Press **C** to correct the last inputs (max. twice). By continuous pressing **C** for 4 seconds the red light LED will become green and the ScoreTrack will be fully reset for a complete new match . 00 00.

When **battery low indication -Lo-** is flashing you are strongly advised to immediately charge the battery.

Tennis scoring combinations

	Super Tie-break 3 rd set	No ad(vantage)	Super Tie-break & No Ad
Normal tennis (best of 3 sets)	Possible	Possible	Possible
Short Set (4 instead of 6 games)	Possible	Possible	Possible
Pro Set (One set of 8 games)	NOT possible	Possible	NOT possible

Remarks

- A specific court number is only to prevent missing a signal. Each remote / ScoreTrack combination uses a unique code.
- Pro set:** instead of playing multiple sets, players may play one "pro set". A pro set is first to 8 games by a margin of two games, instead of first to 6. A 12-point tiebreaker is played when the score is 8-8. These are often played with no-ad scoring.
- Super Tie-break** or Match Tie-break: instead of a third set this is sometimes played like a regular tie-break, but the winner must win ten points instead of seven.
- No Ad(vantage):** the first player or doubles team to four points wins the game. One side does not have to win by two points. When the game score reaches three points each (40-40), the receiver chooses which side of the court (advantage court or deuce court) the service is to be delivered on the seventh and game-deciding point.